


Small AC Gear Motor

Installation Diagram

Installation Diagram of Gear Motor

Factory standard and installation type:

- ◆ All types of gear motors manufactured by the company are suitable for the standard installation type shown in the diagram.
- ◆ After gear motor installed, please unlock the pin on the air hole.

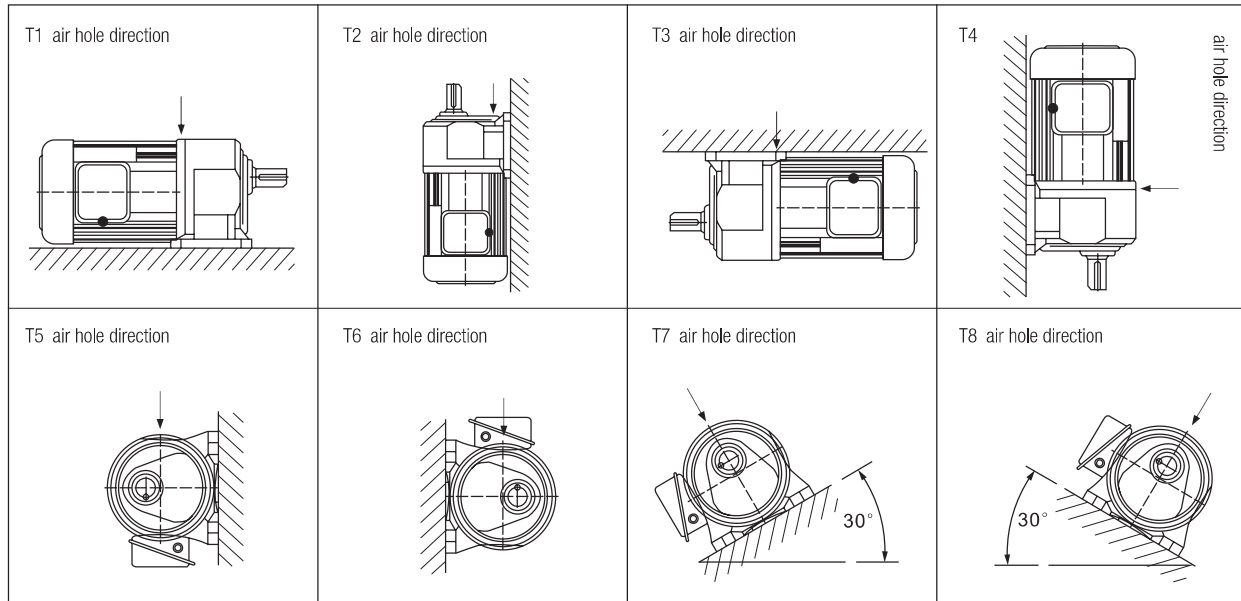

Special installation type:

- ◆ If the installation types shown in the diagram are required, please let us know, and we will modify the direction and location of the vent.
- ◆ After gear motor installed, please unlock the pin on the air hole.

